

Maintenance Kit Installation Instructions


HP LaserJet 4/4+/5



Contents of Maintenance Kit

- 1 - Fuser
- 1 - Transfer Roller
- 1 - MP Tray Separation Pad
- 1 - MP Tray Pickup Roller
- 1 - PC Tray Pickup Roller
- 1 - Optional LC Tray Pickup Roller

(note: Printer shown is the HP LaserJet 4. The LJ 4+ and 5 are similar)

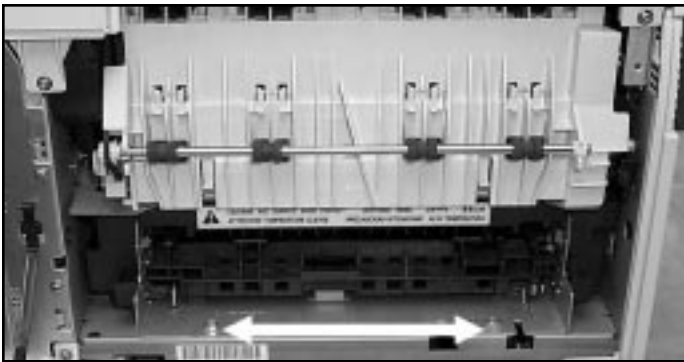


Fuser Replacement

1. Unplug printer and let cool.
2. Open the printer's rear door and take out the two hex head screws (white arrow) that secure the fuser. Slide the fuser out.
3. When reinstalling, slide the fuser into the printer until screw holes line up, then reinstall the screws.




Transfer Roller Replacement

1. Open top cover.
2. Remove toner cartridge.
3. Locate green hook under lid (black arrow).
4. Use hook to gently lift up transfer roller from left side and pull out from right side.
5. Install new roller. Avoid touching the transfer roller with your fingers, as this can cause contamination and adversely affect print quality.
6. Remove paper protector.

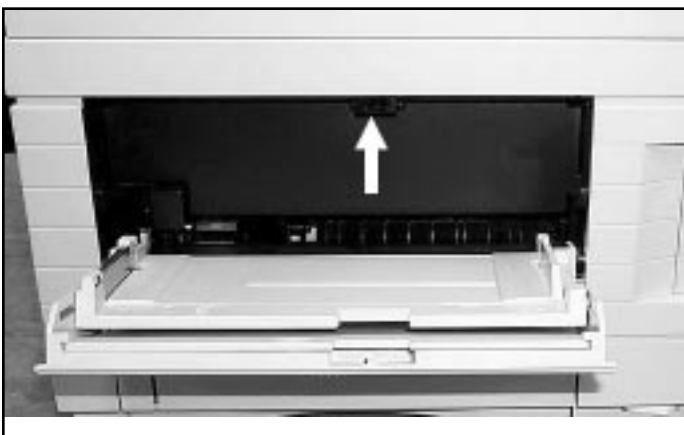


MP Tray Pickup Roller and Separation Pad Replacement

1. Open MP tray.
2. Remove inner black cover by pressing lock tabs at top middle (see arrow).

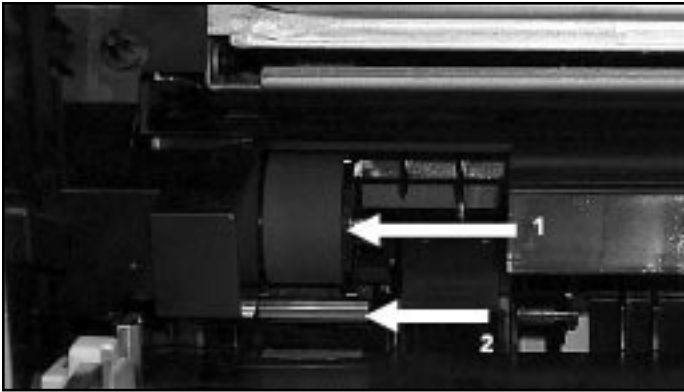


MP Tray Pickup Roller and Separation Pad Replacement, Continued

3. Remove pickup roller by pinching lock tab (arrow 1).
4. Using a flat screwdriver, gently pry up under separation pad to remove (arrow 2).
5. Install new separation pad (note keyed slots).
6. Install new roller.
7. Reinstall cover.

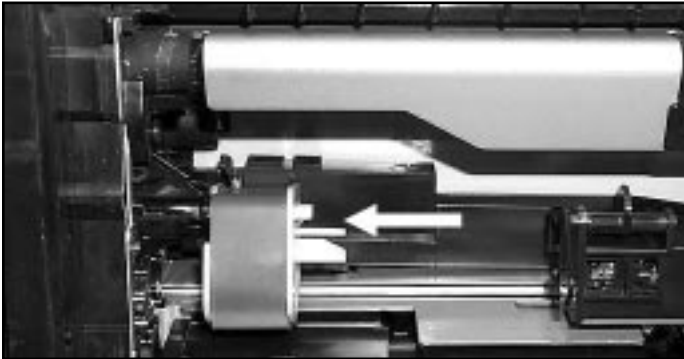

PC Tray Pickup Roller Replacement

1. Remove PC tray.
2. Lift printer up and rest it on its back.
3. Remove old roller by pinching lock tabs (white arrow).
4. Install new roller.

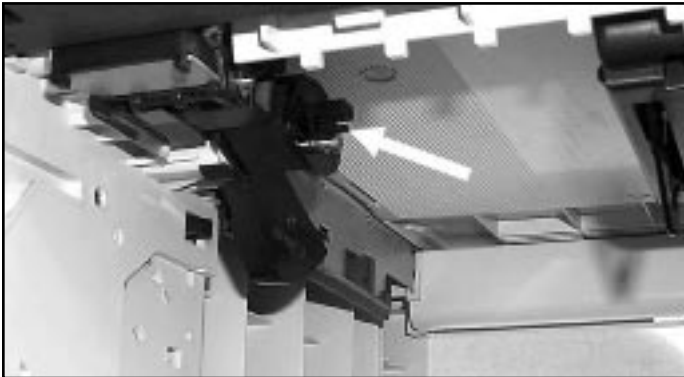

Optional Lower Cassette Tray Pickup Roller Replacement

1. Remove lower cassette tray.
2. Locate pickup roller (white arrow).
3. Remove old roller by pinching lock tabs.
4. Install new roller.

Trouble-shooting

Partially fused print:

1. Remove spacers between rollers.

13 Paper Jam:

1. Verify all pickup/feed/separation rollers are clipped onto shaft properly.
2. Check paper sensor flag in fuser for freedom of movement.

50 Error:

1. Turn printer off for 15 minutes to wait for reset.
2. Remove fuser.
3. Reseat fuser in printer.