


Maintenance Kit Installation Instructions

HP LaserJet 5Si/8000




Contents of Maintenance Kit

- 1 - Fuser
- 8 - Feed/Separation Rollers
- 1 - Transfer Roller

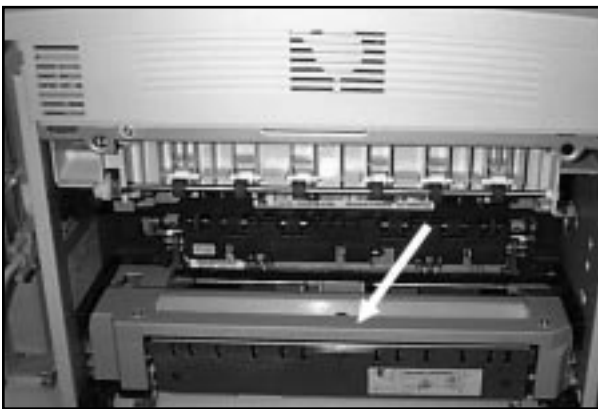

Fuser Removal

- 1. Open left door.
- 2. Remove duplex unit if installed (white arrow).
- 3. Rotate the two blue lock levers down.
- 4. Lift up on back of fuser and slide out.

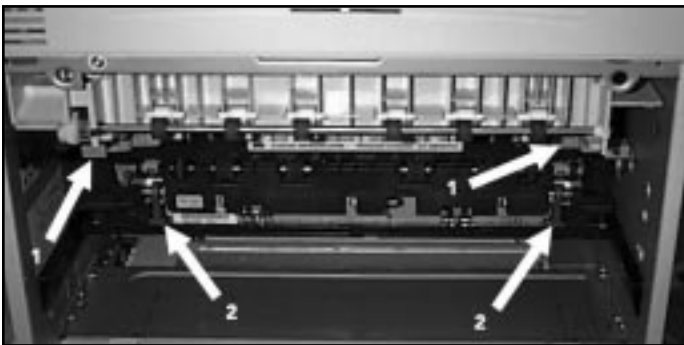

Fuser Installation

- 1. Install fuser and lock in place with blue lock levers (arrow 1).
- 2. Remove orange shipping tabs (if installed).
- 3. Place the two gray pressure levers in down position (arrow 2).
- 4. Reinstall duplex unit.
- 5. Close door.




Transfer Roller Replacement

- 1. Open top cover.
- 2. Remove toner cartridge.
- 3. Locate blue-green tool (arrow 1).
- 4. Use tool to remove transfer roller (arrow 2 denotes side of transfer roller to remove first).
- 5. Install new transfer roller.
- 6. Remove paper protector.



Tray 2

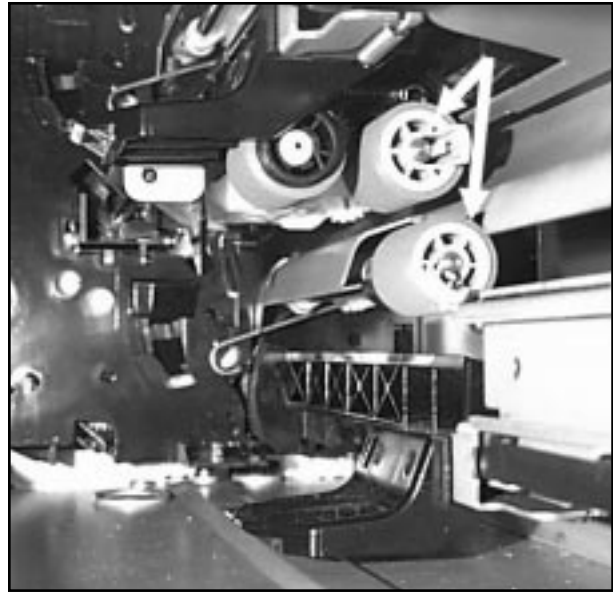

Tray 3

Feed/Separation Rollers Replacement


Before replacing the feed/separation rollers, trays 2 and 3 (also trays 4 and 5 for the LJ 8100) must be removed.

5Si - To remove trays 2 and 3, open the tray, then lift up on the front of the tray, pulling it up and out.

8000 - To remove trays 2, 3, and the 2x500 trays (trays 4 and 5), open the tray and look on the right side of the tray for a blue button. Press this button up and lift the tray up and out.

Once the trays are removed, follow this procedure to replace the feed/separation rollers:

1. Remove feed/separation "blue" rollers (white arrows in tray 2 and tray 3 diagrams above) by pressing the tab on the roller and sliding the roller out (two for each tray).
2. Slide the new roller on the shaft, rotating the roller until it locks into place.

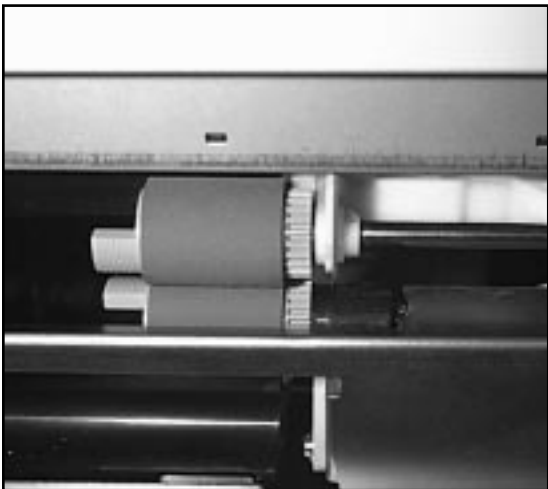

2000-Sheet Input Tray Feed/Separation Roller Replacement

1. Open vertical transfer unit on the right side.
2. Remove feed/separation rollers by pressing the tab on the roller and sliding the roller off the shaft.
3. Slide new roller on shaft and turn to lock in place.
4. Close vertical transfer unit.

Resetting Maintenance Counter

5Si

1. With the printer turned on, press the "Menu" button five times, or until "CONFIGURATION MENU" is displayed.
2. Press the "Items" button until "SERVICE MESSAGE = ON" is displayed. Use the "+" button to set to "OFF".
3. Press the "Select" button to activate your choice, which will reset the

maintenance counter and service message.

8000

1. With the printer turned on, press the "Menu" button until "CONFIGURATION MENU" is displayed.
2. Press the "Item" button until "SERVICE MESSAGE = ON" is displayed. Use the "Value" button to set to "OFF."
3. Press the "Select" button to activate your choice, which will reset the maintenance counter and service message.