



Maintenance Kit Installation Instructions

HP LaserJet 9000

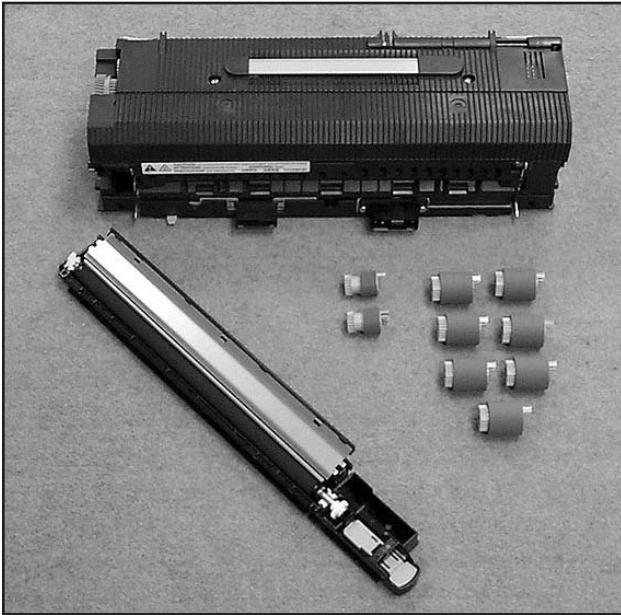


Contents of Maintenance Kit

- 1 - Fuser
- 1 - Transfer Roller Assembly (some kits may include the transfer roller only)
- 7 - Feed/Separation Rollers
- 2 - Pickup Rollers

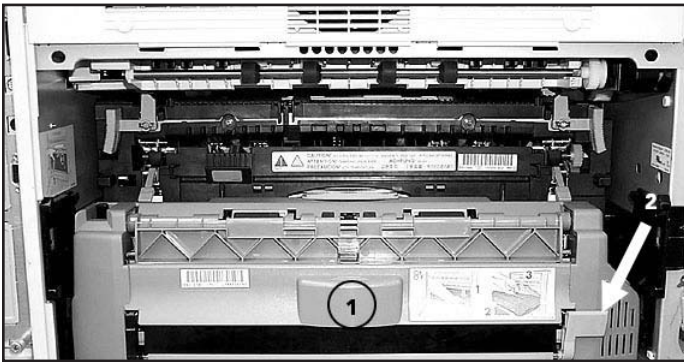


Fuser Replacement

1. Power off printer and open left door.
2. Remove duplex unit (circle 1), if installed, by pushing down lock tab (arrow 2).

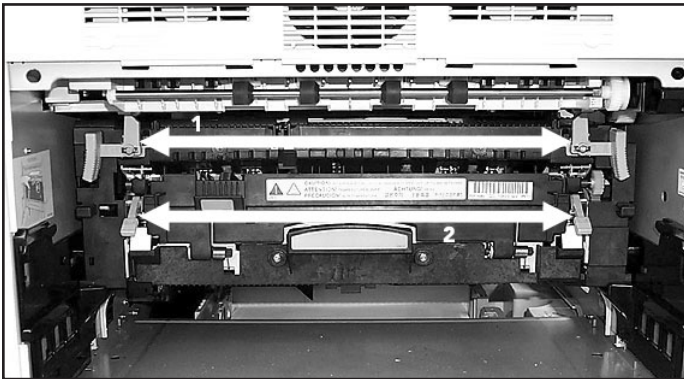

Fuser Replacement, Continued

3. Turn blue lock levers down (arrow 1).
4. Pull fuser out and install new fuser.
5. Turn blue lock levers up.
6. Place the two blue pressure levers in down position (arrow 2).
7. Reinstall duplex unit (if applicable) and close door.

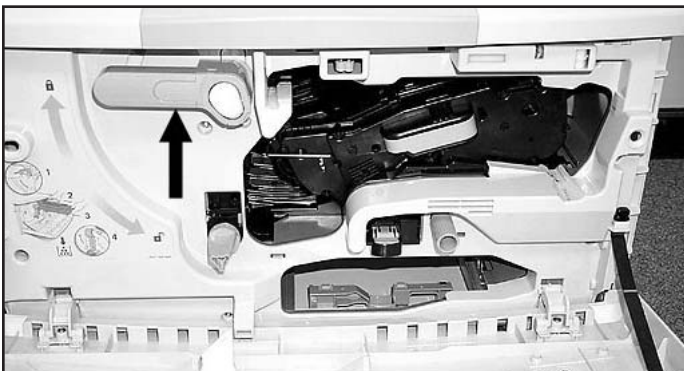

Transfer Roller Replacement

1. Open front door.
2. Pivot green handle down (black arrow).

