



LJ 2400 Feed Kit Instructions

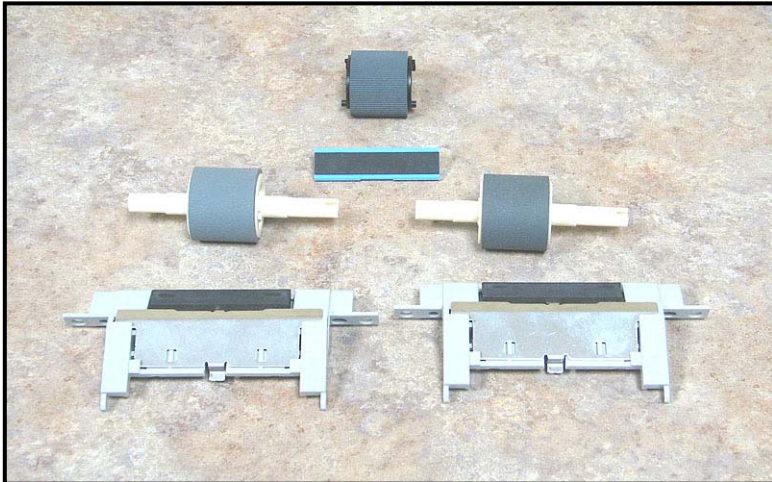


Contents of Maintenance Kit

- 1- Tray 1 Pickup Roller
- 1- Tray 1 Separation Pad
- 2- Tray 2 & 3 Cassette Pickup Roller
- 2- Tray 2 & 3 Cassette Separation Pad

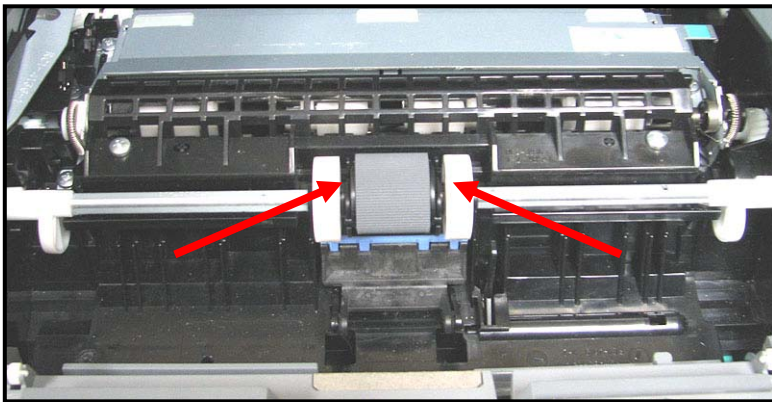

Tray 1 Pickup Roller Removal


1. Open toner cartridge door.
2. Remove toner cartridge.
3. Pull tabs (arrows) on either side of roller out to release roller from shaft.

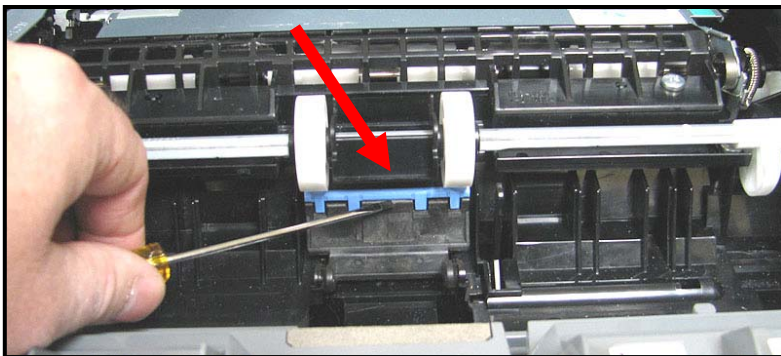

Tray 1 Separation Pad Removal



1. Remove pickup roller
2. Use a flatbed screwdriver and gently pry out separation pad (arrow).
3. Install new separation pad.
4. Insert new pickup roller.

LJ 2400 Feed Kit Instructions

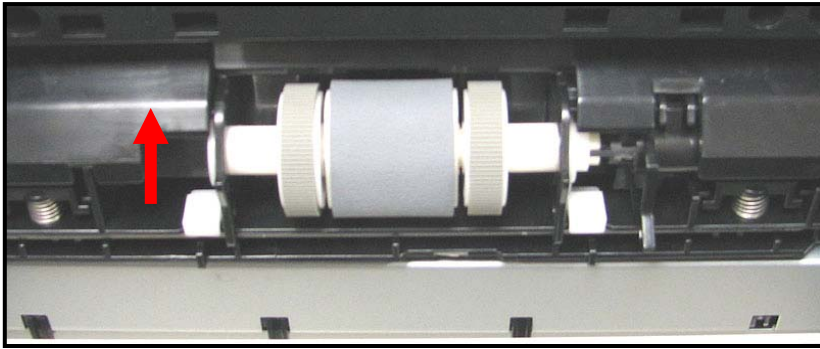

Tray 2 Cassette Pickup Roller


1. Remove cassette.
2. To remove roller, both left and right bushings must be removed.
 - a. Left side first by rotating up and moving left.
 - b. Right side, rotate up and move right over shaft (circle).
3. Remove roller by moving left and lifting right side out first.

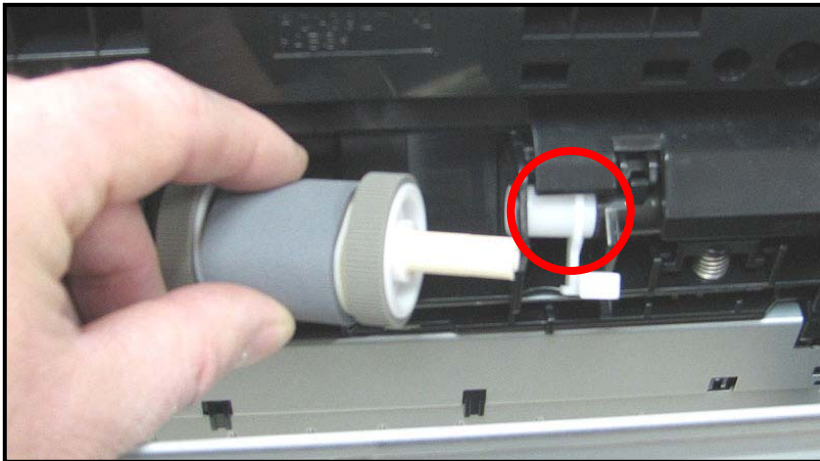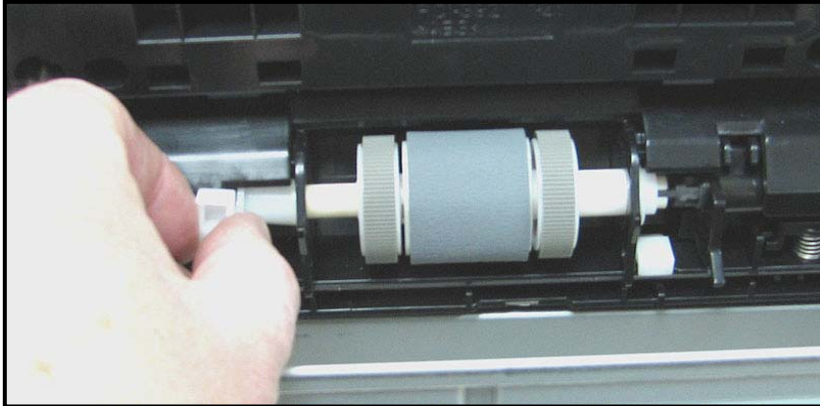

Tray 2 Cassette Separation Pad


1. Remove cassette.
2. Remove screws (arrows).
3. Lift pad and remove.
4. Install new separation pad.

LJ 2400 Feed Kit Instructions

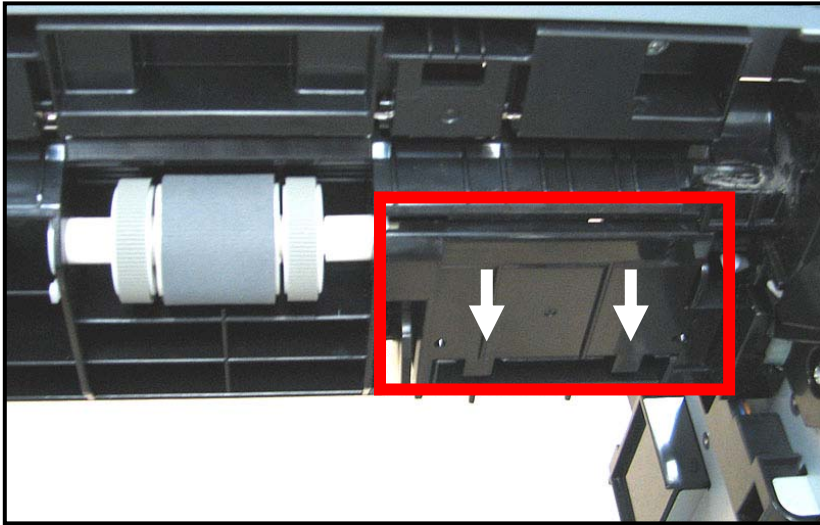

Tray 3 Cassette Pickup Roller


1. Remove Cassette.
2. Remove Cover (square) by gently prying under tabs (arrows).
3. Once cover is removed follow instructions for tray 2.

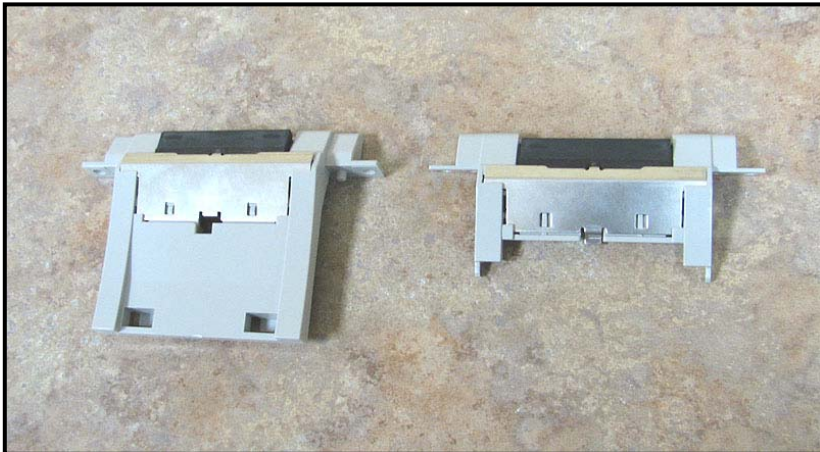

Tray 3 Cassette Separation Pad

1. Remove the tray 3 sep pad as you did for tray 2. First thing to notice is that if tray 3 is a 500 sheet tray it will be larger (as shown). The small pad assembly in the kit will not fit in the larger tray. The individual pad is the same on both assemblies so the pad itself must be removed from the new smaller assembly and installed on the larger assembly.

LJ 2400 Feed Kit Instructions

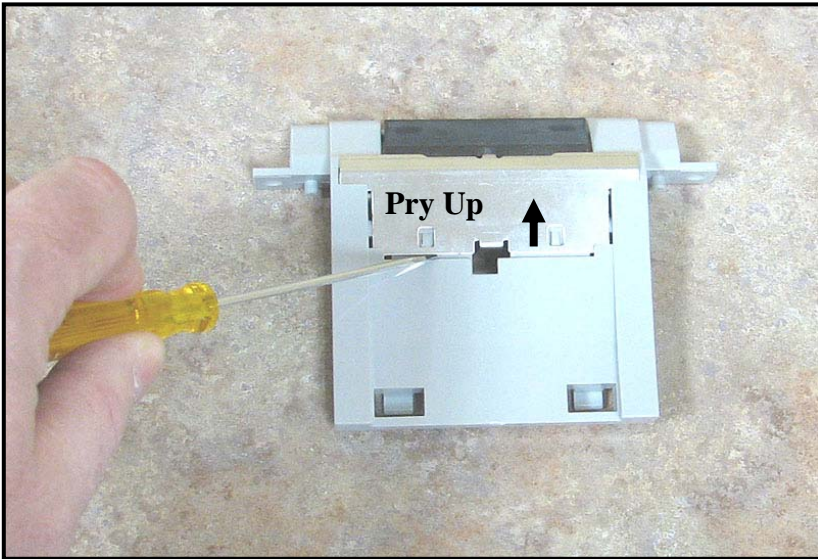

Tray 3 Separation Pad Con't

2. To remove the individual pad, use a small screwdriver and gently pry the metal retaining plate up and off as shown.

3. After the metal retainer is removed, gently pry the pad and spring from its retainers (arrow). Do the same to the new pad assembly and install the new pad in the old assembly with its spring and reinstalled the metal retaining plate.

4. Reinstall large assembly back into tray.

